



# General Installation Guidelines


Directrices generales de instalacion




Ensure your surface is clean and structurally sound. Hammer or screw down any surface protrusions



Measure, layout and cut to length

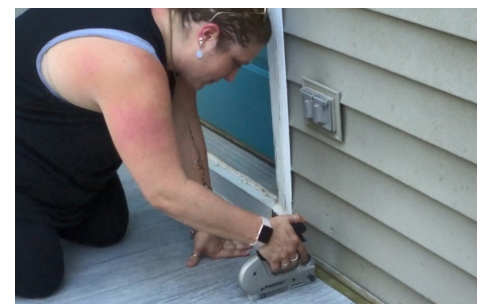

Tack down the Outdoor Floor with a stapler to hold it in place as you glue and trim

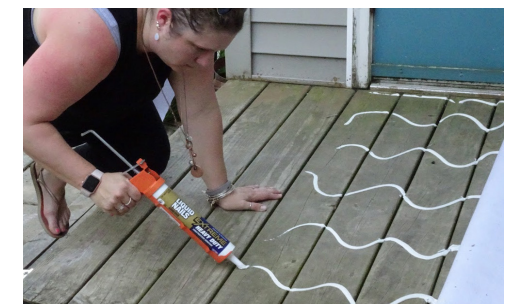

Roll back the material, and apply adhesive as per the manufacturers instructions



Trowel the adhesive smooth and roll back the material onto the adhesive. Be sure adhesive reaches the edges



Use termination strips to hold down the edges and secure it to the surface

Instructivo de Instalación para el Piso Exterior d-c-fix®

\*Para información adicional del Piso Exterior d-c-fix®, incluyendo videos y documentos por favor visita el sitio web: [dcfixbrand.com/outdoorfloor](http://dcfixbrand.com/outdoorfloor)

La instalación requiere herramientas y materiales básicos (disponibles en tu tienda local de herramientas y mejoras para el hogar)

• Cinta métrica • Tijeras • Navaja multiusos • Martillo • Adhesivo compatible con PVC para uso en exteriores • Engrapadora • Tiras de Umbral para alfombra de Aluminio con clavos de acero inoxidable u otro material resistente al clima para sujetar el material en el perímetro del patio, (opcional) molduras de borde de goteo.

Nota: Antes de comenzar, asegúrese que su patio sea estructuralmente sólido. No instale el Piso Exterior sobre paneles rotos, dañados u otros defectos que generen peligro al utilizar la superficie del porche/patio/terraza.

Es recomendable extender el rollo de Piso Exterior d-c-fix®, preferentemente expuesto al sol, para suavizar y aplanar el material.

Siga las recomendaciones de aplicación del fabricante de adhesivos. Esto incluye la temperatura de aplicación, preparación de la superficie, cantidad y método de aplicación.

1. Cuando aplique el Piso Exterior d-c-fix®, se recomienda limpiar los paneles del patio de cualquier contaminación como tierra, alga, moho, etcétera, que pueda afectar la adhesión del material. Asegúrese que la superficie este completamente seca antes de la instalación. Se recomienda aplanar cualquier clavo, tornillo u otra protuberancia en la superficie.
2. Coloque el Piso Exterior d-c-fix® en la superficie y desenróllelo. Asegure el lado inicial del rollo a la superficie a cubrir con una grapa o tornillo. La grapa o tornillo será retirada una vez que termine la instalación. Si utiliza mas de un rollo o varias capas de material para cubrir la superficie, asegúrese de que extremo del rollo sin textil quede colocado sobrepuesto a la superficie de la capa siguiente con un traslape de 1". Nota: Si utiliza grapas o tornillos que puedan perforar la superficie del material, asegúrese de sellar el área o colocarlos en un área que no permita que el agua se filtre entre la capa del material d-c-fix® y la superficie del piso del patio.
3. Enrolle el Piso Exterior d-c-fix® nuevamente hacia la posición inicial fijada.
4. Aplique el adhesivo a los paneles o superficie del suelo usando una llana para cubrir uniformemente, tenga cuidado de no aplicar demasiado adhesivo ya que puede afectar el proceso de curado.
5. Con cuidado comience a desenrollar el Piso Exterior d-c-fix® ejerciendo presión sobre el material para que tenga contacto con el adhesivo. Utilice la navaja multiusos para cortar el material alrededor de los objetos fijos en la superficie, tales como postes. Espere a que el adhesivo seque durante 24 horas antes de utilizar el área. El adhesivo puede tardar hasta 7 días para terminar el proceso de curado por completo.
6. Aplique el adhesivo en la parte inferior del vinil en la unión del traslape de 1". Cubra uniformemente toda el área de la unión y remueva inmediatamente cualquier exceso de adhesivo con un paño húmedo. Si no retira el exceso de adhesivo antes de que cure puede provocar imperfecciones en la superficie del material d-c-fix®.
7. Si utiliza tiras de umbral para alfombra para el terminado, fíjelas al Piso Exterior d-c-fix® y utilice la navaja multiusos para cortar el exceso de material. Aplique sellador alrededor de los clavos o tornillos utilizados para prevenir filtración de agua.

## Basic tools and materials needed for installation

(available at your local hardware or DIY store):

• Scissors	• Stapler
• Tape	• Utility knife
• Hammer	
• Adhesive compatible with PVC and exterior use	
• Aluminum carpet strips w/stainless steel or other weather resistant nails to fasten around the deck perimeter or trim boards with drip edge (optional)	

Note: Before proceeding, be sure that your deck is structurally sound. Do not install Outdoor Floor over broken boards or other defects that could cause hazards in using the deck/patio/porch surface. It is recommended that you unroll your d-c-fix® Outdoor Floor preferably outside under the sun to allow the material to soften and flatten out.

Apply adhesive according to adhesive manufacturers recommendation\*. This should include temperature range, surface prep and amount.

1. When applying d-c-fix® Outdoor Floor, it is recommended to clean the deck planks from any dirt, algae, mold, etc. as it could have a negative effect on the adhesion. Please allow the surface to completely dry before installation. It is also recommended to flatten any nail heads or screws that protrude from the surface.
2. Place d-c-fix® Outdoor Floor on the surface and roll out. Attach the starting end to your surface via stapler or another fastener. You will remove the fastener once the installation is complete. If using more than one roll or laying sheets next to each other, ensure the clean edge (the edge with no fabric) is installed over the top of the next sheet using a 1" overlap. Note: if using staples or other fasteners that will puncture the surface, make sure to seal or place in area that will not allow water to get in between the flooring and material and underlying substrate.
3. Roll the d-c-fix® Outdoor Floor back to the starting position.
4. Apply adhesive\* to the deck boards using a trowel\* to spread evenly edge to edge, be careful not to over apply the adhesive as it may not cure properly.
5. Carefully unroll d-c-fix® Outdoor Floor applying pressure throughout the sheet to flatten the adhesive. Use a utility knife to cut out or around any permanent objects on the surface, such as posts. Allow the adhesive to dry for 24 hours before resuming normal use. It can take up to 7 days for the adhesives to fully cure.
6. For best results apply a very thin layer of adhesive\* on the vinyl underneath the 1" overlap seam. Apply to all areas of the seam and wipe away any excess immediately with a damp cloth. Failure to wipe away excess adhesive before curing may lead to imperfections of the surface
7. If using aluminum carpet strips to terminate, nail to the top of the d-c-fix® Outdoor Floor and use a utility knife to trim excess. Seal around the nails to prevent water infiltration.

\* Use adhesive sparingly as per manufacturer's instructions. Use of excessive adhesive could lead to adverse effects such as poor curing, staining etc.